

FIG. 1

RC1 : RADIO COMMUNICATION SYSTEM

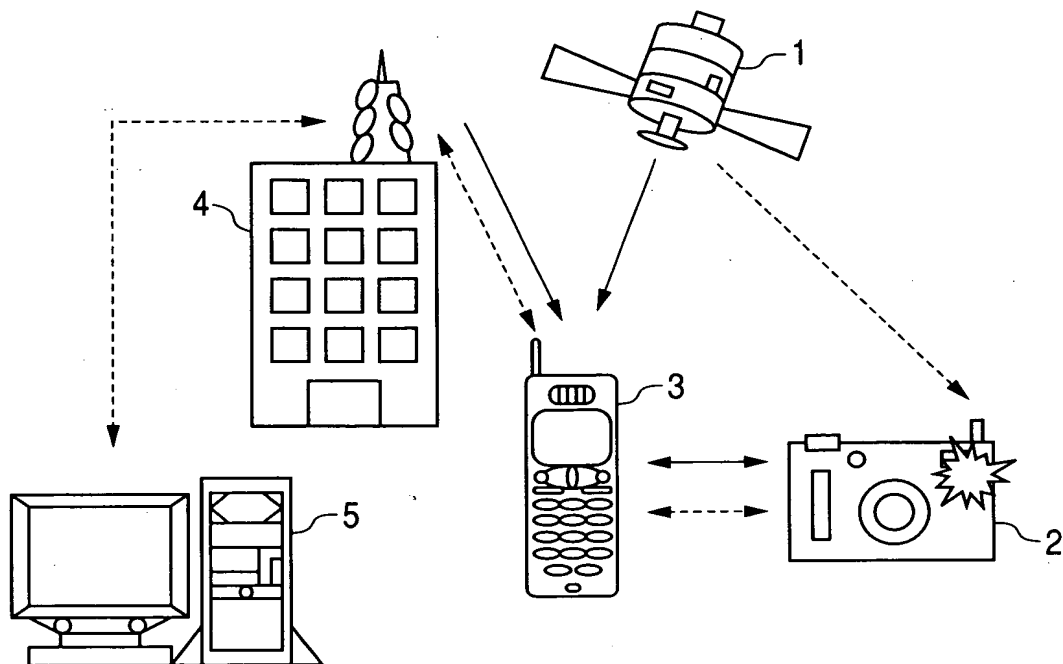


FIG. 2

3: MOBILE TERMINAL


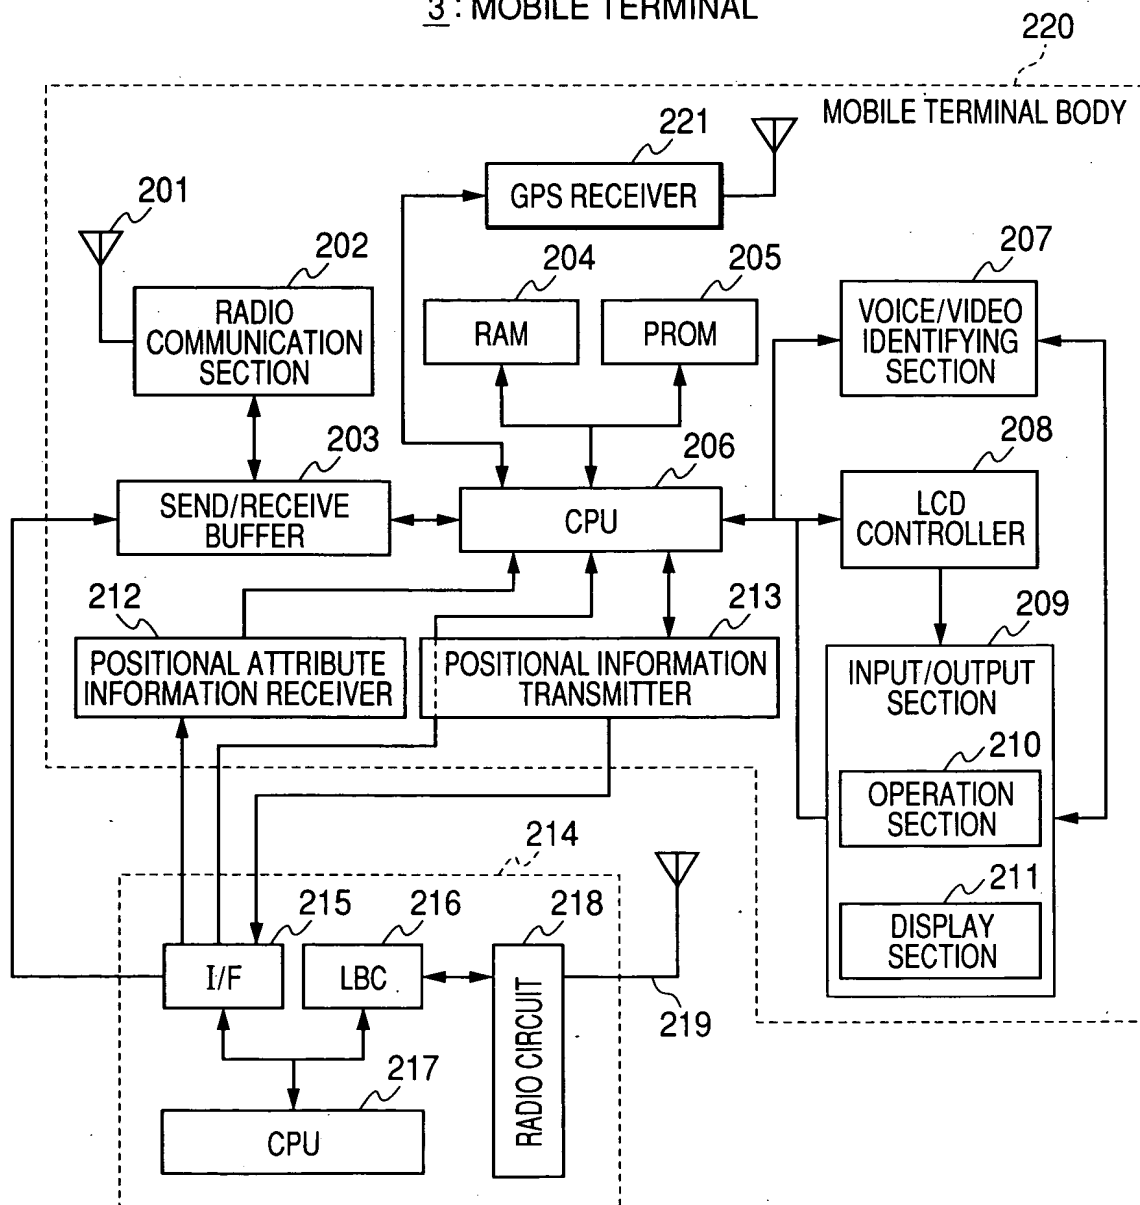


FIG. 3

2: IMAGE PICK-UP APPARATUS

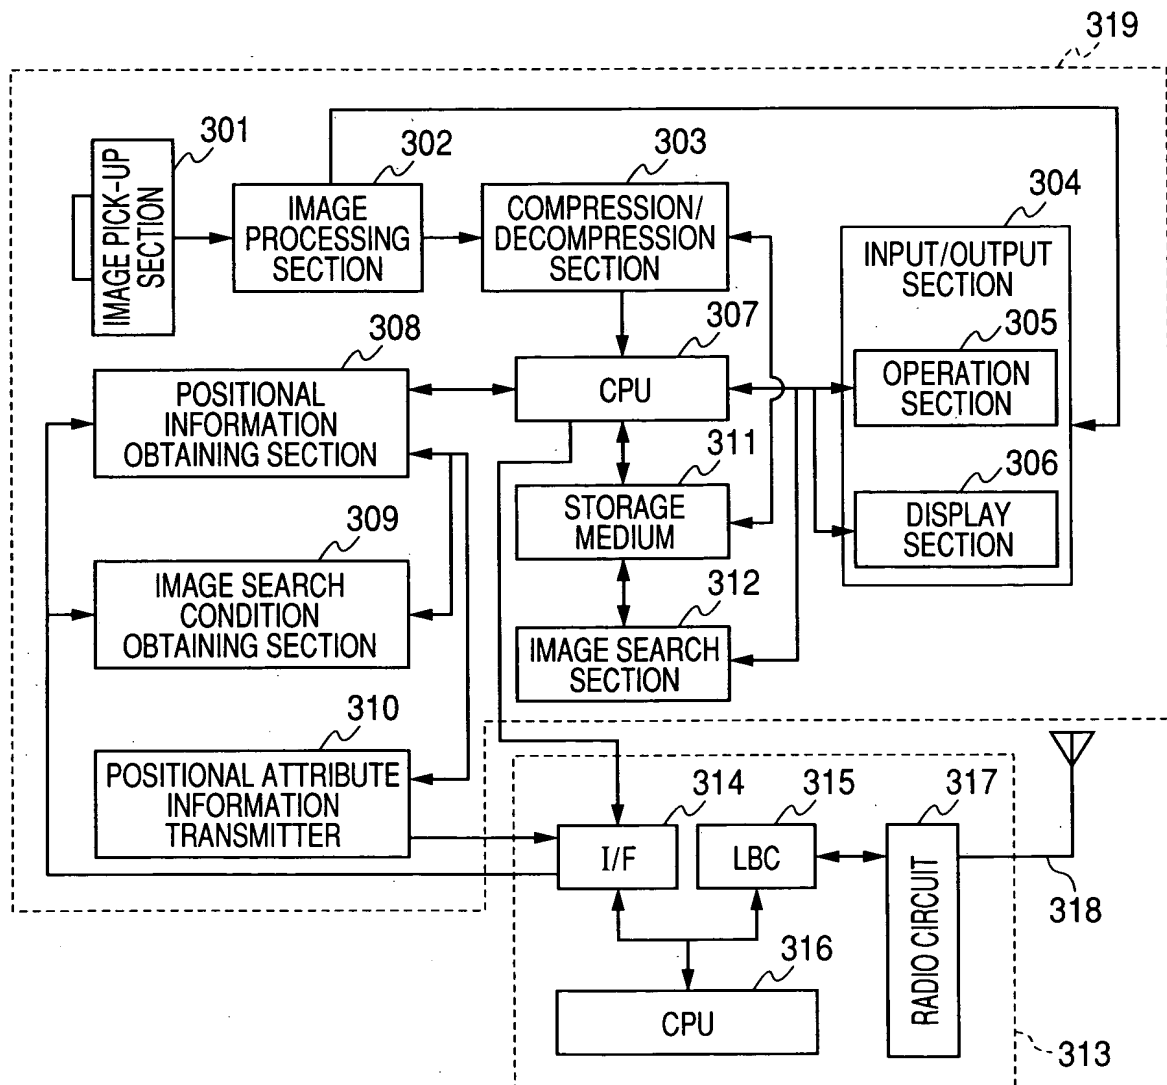

4/9

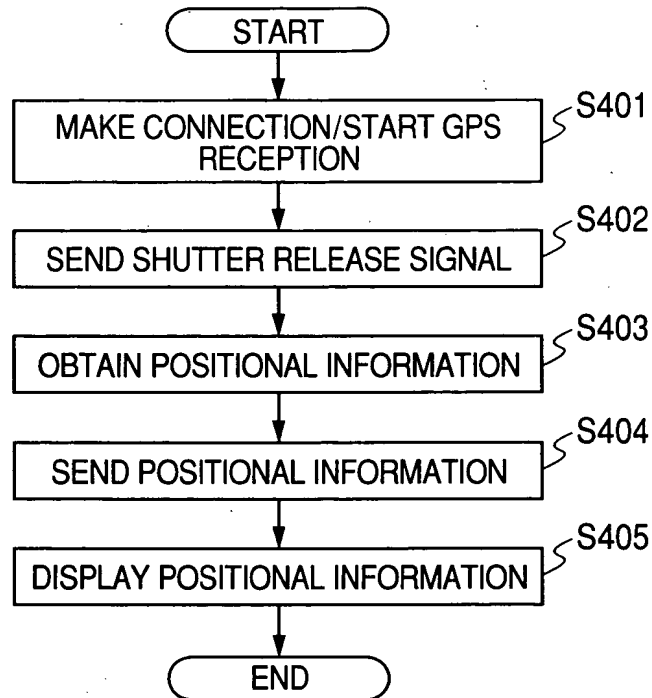
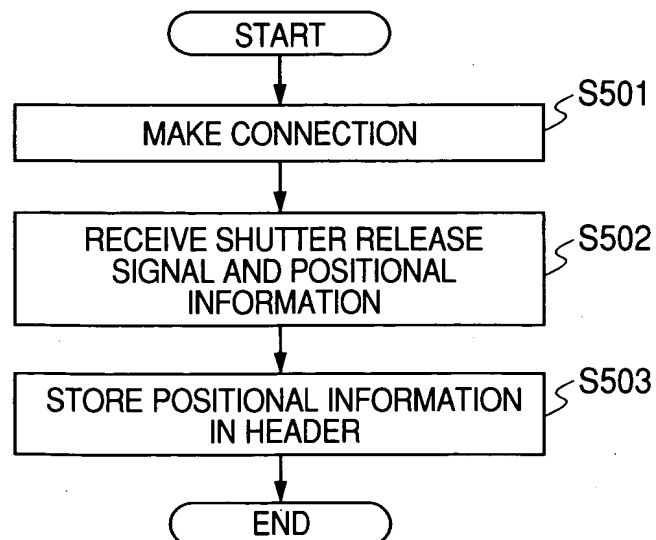
FIG. 4**FIG. 5**

FIG. 6


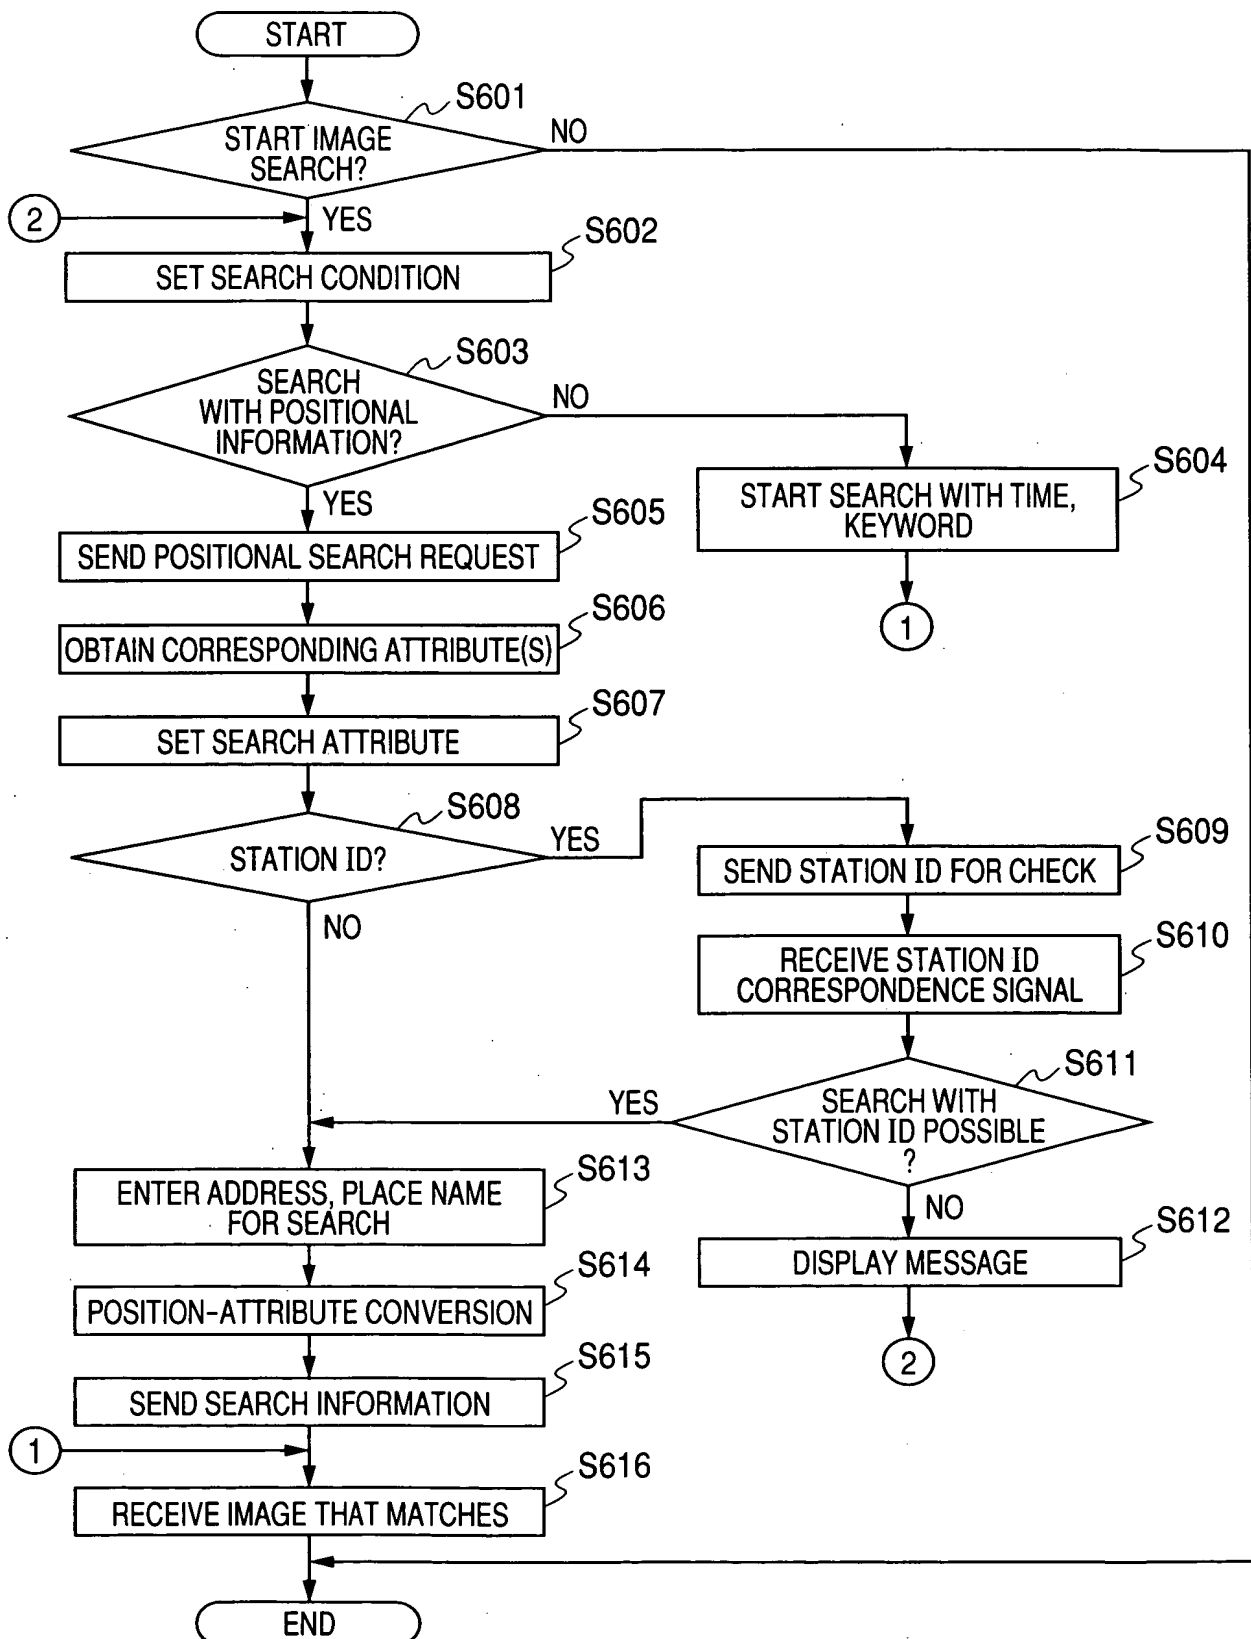


FIG. 7

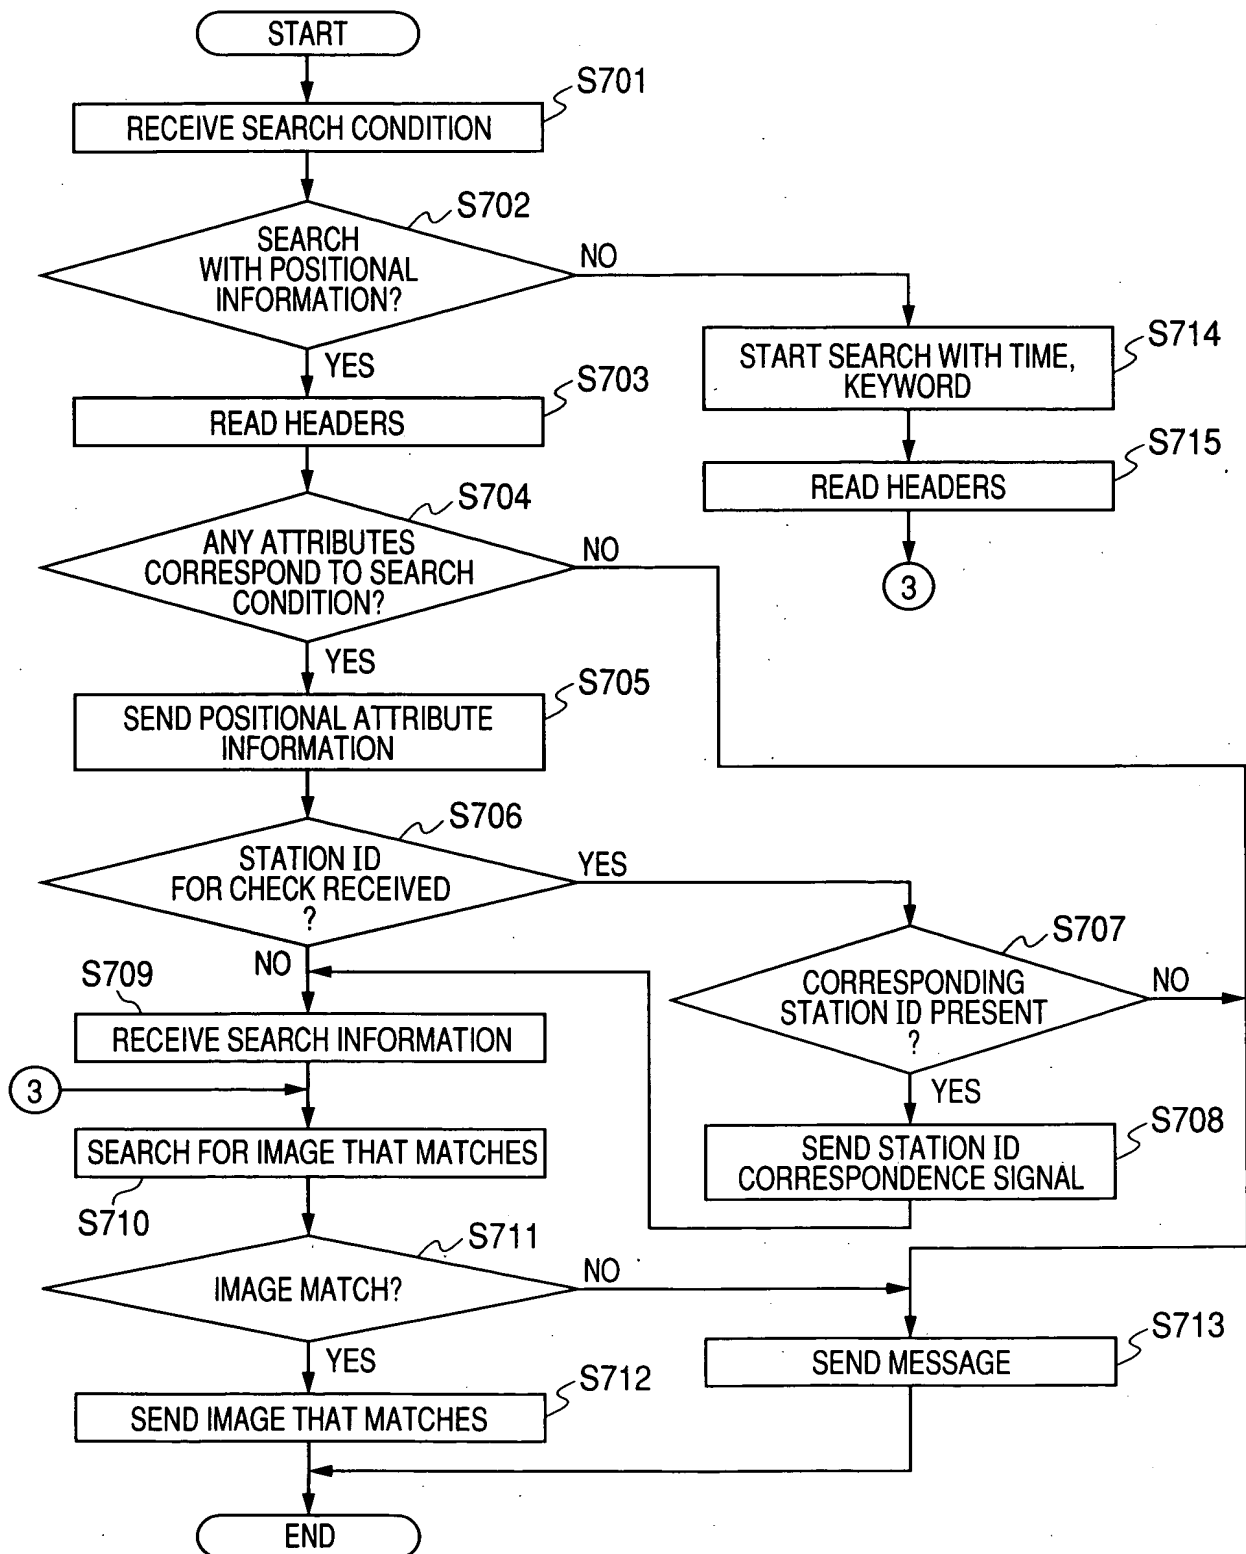

7/9

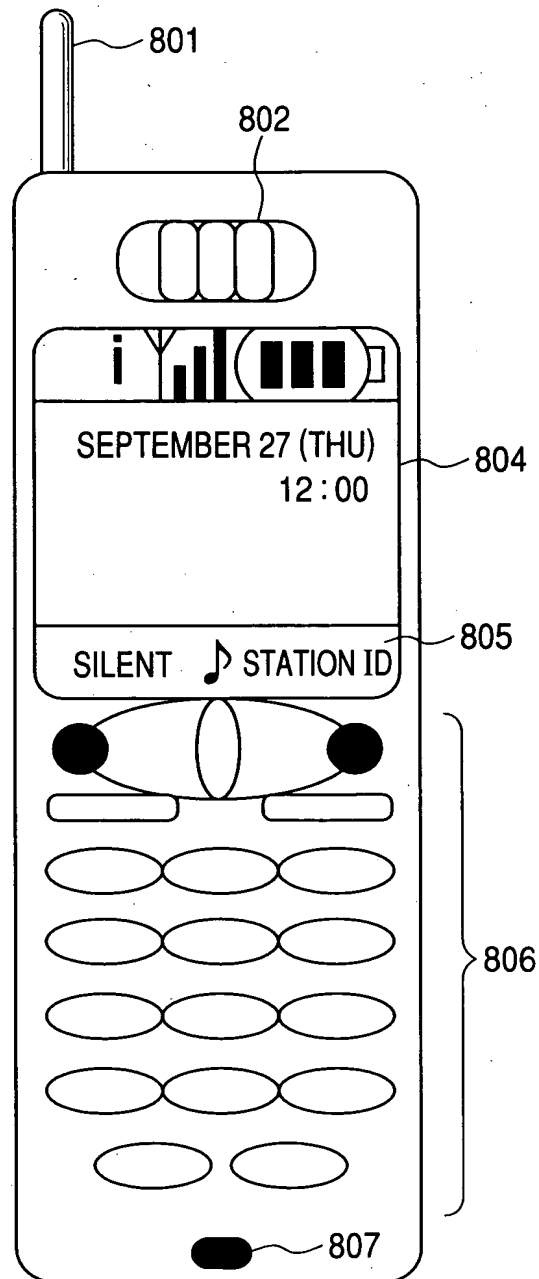
FIG. 83: MOBILE TERMINAL

FIG. 9

FIG. 9 is a screen display for a device. At the top, there is a status bar containing an information icon 'i', a signal strength indicator, a battery level indicator, and a speaker icon. Below the status bar, the title 'SEARCH CONDITION SETTING' is displayed. Under the title, there are three radio button options: 'TIME' (unselected), 'POSITIONAL INFORMATION' (selected), and 'KEYWORD' (unselected). At the bottom of the screen, there are two oval buttons labeled 'BACK' and 'SET'. A footer bar at the very bottom contains the text 'SILENT' followed by a musical note icon.

FIG. 10

FIG. 10 is a screen display for a device. At the top, there is a status bar containing an information icon 'i', a signal strength indicator, a battery level indicator, and a speaker icon. Below the status bar, the title 'SEARCH ATTRIBUTE SETTING' is displayed. Under the title, there are three radio button options: 'GPS' (unselected), 'STATION ID' (selected), and 'CHARACTER' (unselected). At the bottom of the screen, there are two oval buttons labeled 'BACK' and 'SET'. A footer bar at the very bottom contains the text 'SILENT' followed by a musical note icon.

FIG. 11

FIG. 11 is a screen display for a device. At the top, there is a status bar containing an information icon 'i', a signal strength indicator, a battery level indicator, and a speaker icon. Below the status bar, the title 'MODE CHANGE' is displayed. Under the title, there are three radio button options: 'LOCK MODE' (unselected), 'AUTOMATIC MODE' (unselected), and 'NORMAL MODE' (selected). At the bottom of the screen, there are two oval buttons labeled 'BACK' and 'SET'. A footer bar at the very bottom contains the text 'SILENT' followed by a musical note icon.

FIG. 12

FIG. 12 is a screen display for a device. At the top, there is a status bar containing an information icon 'i', a signal strength indicator, a battery level indicator, and a speaker icon. Below the status bar, the title 'SEARCH CONDITION SETTING' is displayed. Under the title, there are four radio button options: 'TIME' (unselected), 'GPS' (selected), 'STATION ID' (unselected), and 'KEYWORD' (unselected). At the bottom of the screen, there are two oval buttons labeled 'BACK' and 'SET'. A footer bar at the very bottom contains the text 'SILENT' followed by a musical note icon.

FIG. 13

3: MOBILE TERMINAL

